

# Technical Data Sheet (TDS)


CUROX<sup>®</sup>M-303R  
Thermoset (TS)



## CUROX<sup>®</sup>M-303R

Methyl ethyl ketone peroxide  
CAS#1338-23-4  
Red liquid

### Structural Formula

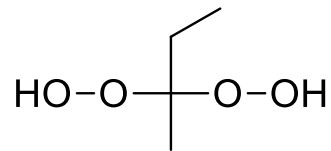

### Description

Red coloured liquid, consisting of peroxides based on methyl ethyl ketone peroxide, essentially phlegmatized with dimethyl phthalate. This ketone peroxide is used as a radical initiator in the curing of unsaturated polyester resins in combination with cobalt accelerators.

**Advantage:** Due to the red coloured peroxide, homogenisation in the resin can be controlled. Red colour disappears after curing.

### Technical Data

Appearance	red liquid
Desensitising agent	dimethyl phthalate
Active oxygen (AO)	ca. 9.1 % w/w
Hydrogen peroxide	ca. 1.7 % w/w
Water	ca. 1.5 % w/w
Density at 20 °C	ca. 1.1 g/cm <sup>3</sup>
Viscosity at 20 °C	ca. 15 mPa·s
Flash point	> 80 °C
Critical temperature (SADT)	ca. 60 °C
Cold storage stability	below -20 °C
Recommended storage temperature	0 °C to 30 °C ●
Storage stability as from date of delivery	6 months

### Standard Packaging

5 kg and 25 kg in HDPE canisters

## Application

### POLYESTER CURING:

CUROX<sup>®</sup>M-303R is a general purpose MEKP and is the “workhorse” of the United Initiators portfolio. It provides consistent curing performance in resins and gelcoats at ambient temperature.

Standard dosage level: 1 - 3 % with 0.5 - 2 % of a 1 % cobalt solution

The "Pot life" (gel time of resin + peroxide + accelerator) is relatively moderate compared to standard MEKP's and can be prolonged by adding Inhibitor TC 510.

### CURING PERFORMANCE:

- Moderate evolution of heat
- Medium reactivity in the MEKP-product range

Temperatures below 20 °C prolong curing times considerably. Cobalt / amine accelerators or blends with acetylacetone peroxide should then be used.

### PROCESSING METHODS:

Suitable applications are hand lay-up, spray-up, RTM, continuous laminating, centrifugal casting, filament winding, polyester concrete and vacuum infusion.

## Decomposition Products

Possible detectable decomposition products: methyl ethyl ketone, acetic acid, ethane

## Storage


Avoid any source of heat, light, humidity and protect the product from impurities. Keep within save temperature limits.

# Technical Data Sheet (TDS)

CUROX<sup>®</sup>M-303R  
Thermoset (TS)



## Measurements

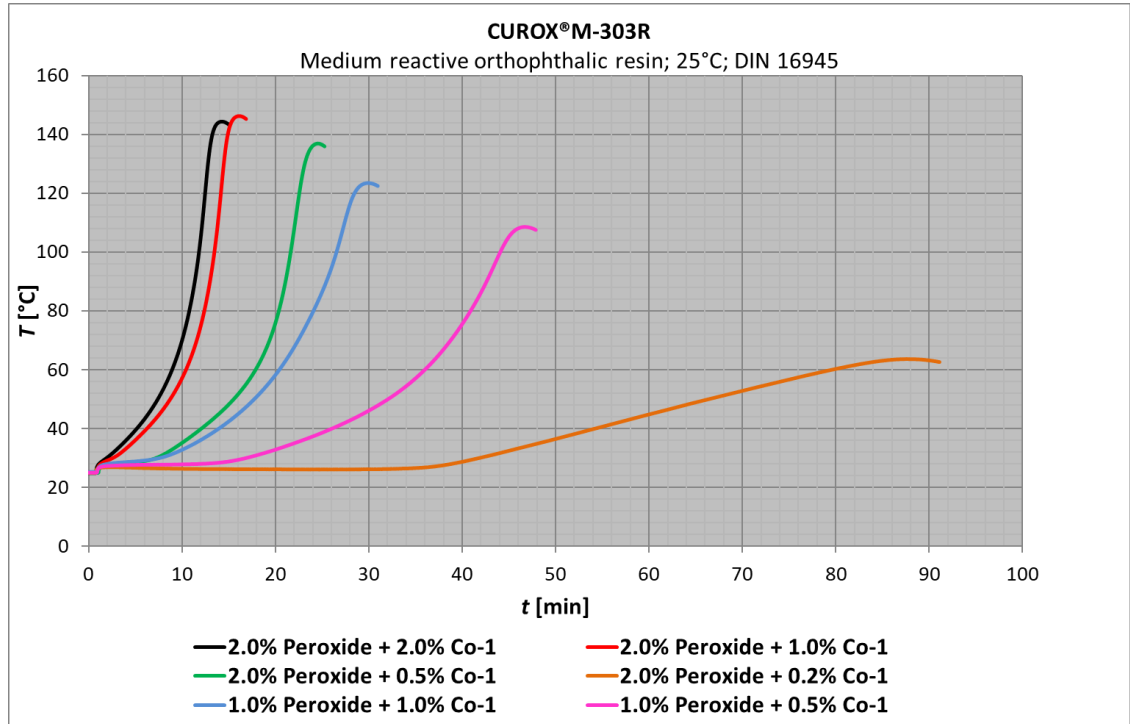

<b>Formulation (parts per weight)</b>							
Resin		100	100	100	100	100	100
CUROX <sup>®</sup> M-303R	[Vol-%]	2.0	2.0	2.0	2.0	1.0	1.0
Co-1	[Vol-%]	2.0	1.0	0.5	0.2	1.0	0.5
<b>Curing Data</b>							
Gel time 25 - 30 °C $t_{gel}$	[min]	1.9	2.6	7.2	41.9	7.6	16.9
Gel time 25 - 35 °C $t_{gel}$	[min]	3.7	4.7	10.0	48.2	11.4	22.0
Curing time $t_{max}$	[min]	14.3	16.1	24.5	87.4	29.9	46.6
Peak temperature $T_{max}$	[°C]	144	146	137	64	124	109

### Disclaimer:

The information contained herein and all further technical advice that may be provided by United Initiators reflects our current knowledge and experience based on our internal research and development as to our products and applications. United Initiators does not make any warranties about the information provided as to specific properties of products described their suitability for a particular application and representing complete instructions for use. Additionally, United Initiators does not make any warranties in respect of product and shelf-life properties. We are not legally responsible and liable for the use of any information provided, including with regard to existing third-party intellectual property rights, especially patent rights. We reserve the right to make any changes according to technological progress or further developments. Application and usage of our products based on our technical advice is out of our control, strictly at your own risk and is the sole responsibility of the user. The user is not released from the obligation to conduct careful inspection and testing of incoming products in order to verify their suitability for the intended application.

United Initiators  
**Europe**  
T: +49 89 74422 237  
F: +49 89 74422 6237  
[cs-initiators.eu@united-in.com](mailto:cs-initiators.eu@united-in.com)

United Initiators  
**Nafta**  
T: +1 800 231 2702  
F: +1 440 323 0898  
[cs-initiators.nafta@united-in.com](mailto:cs-initiators.nafta@united-in.com)

United Initiators  
**China**  
T: +86 21 6117 2758  
F: +86 139 2503 8952  
[cs-initiators.cn@united-in.com](mailto:cs-initiators.cn@united-in.com)

[www.united-initiators.com](http://www.united-initiators.com)